



Fig. 1202—Transmission and Overdrive Unit (C15, C17)

- |  |  |  |
|--|--|--|
| <ul style="list-style-type: none"> <li>1—Gearshift lever locating pin</li> <li>2—Gearshift lever friction plate</li> <li>3—Gearshift lever friction plate support</li> <li>4—Gearshift lever friction plate spring</li> <li>5—Gearshift lever thrust ball</li> <li>6—Gearshift lever thrust spring</li> <li>7—Gearshift lever housing</li> <li>8—Transmission case cover flange gasket</li> <li>9—Transmission case cover</li> <li>10—Gearshift rail retainer oil seal</li> <li>11—Gearshift rail retainer—front</li> <li>12—Gearshift rail and fork—second and direct</li> <li>13—Gearshift selector ball</li> <li>14—Gearshift selector ball spring</li> <li>15—Transmission drive pinion bearing retainer gasket</li> <li>16—Transmission drive pinion bearing washer</li> <li>17—Transmission clutch gear and facings</li> <li>18—Transmission clutch gear ball</li> <li>19—Transmission shaft pilot bearing</li> <li>20—Transmission shaft pilot bearing spacer</li> <li>21—Transmission drive pinion bearing snap ring</li> <li>22—Transmission drive pinion bearing retainer</li> <li>23—Transmission drive pinion</li> <li>24—Transmission drive pinion bearing</li> <li>25—Transmission clutch gear ball spring</li> <li>26—Transmission second gear thrust washer—front</li> <li>27—Overdrive control lever</li> <li>28—Gearshift rail retainer screw</li> <li>29—Gearshift rail retainer—rear</li> <li>30—Overdrive control link pin—short</li> <li>31—Overdrive control link</li> <li>32—Overdrive control rail latch fulcrum pin—upper</li> <li>33—Overdrive control link pin—long</li> <li>34—Overdrive shift rail dust cover</li> </ul> | <ul style="list-style-type: none"> <li>35—Overdrive control rail housing gasket</li> <li>36—Overdrive control housing</li> <li>37—Transmission case cover gasket</li> <li>38—Overdrive shift rail fork locating washer</li> <li>39—Overdrive shift rail fork and locking pin</li> <li>40—Overdrive housing gasket</li> <li>41—Transmission shaft bearing adapter</li> <li>42—Overdrive shift fork rail spring</li> <li>43—Overdrive shift fork rail "C" washer</li> <li>44—Overdrive shift fork rail "C" washer retainer</li> <li>45—Overdrive shift fork rail</li> <li>46—Overdrive control rail stop screw nut</li> <li>47—Overdrive control rail stop screw</li> <li>48—Transmission shaft bearing—rear</li> <li>49—Overdrive damper screw</li> <li>50—Overdrive damper</li> <li>51—Overdrive planet pinion and cage</li> <li>52—Overdrive main shaft and annulus gear</li> <li>53—Overdrive rear bearing retainer gasket</li> <li>54—Overdrive core thrust washer retaining pin</li> <li>55—Overdrive clutch pawl core shell</li> <li>56—Overdrive core thrust washer</li> <li>57—Overdrive clutch pawl and core</li> <li>58—Overdrive damper thrust washer</li> <li>59—Overdrive main shaft front bearing snap ring</li> <li>60—Overdrive shaft bearing oil seal washer</li> <li>61—Speedometer drive gear</li> <li>62—Free wheeling cam and rollers</li> <li>63—Transmission shaft flange</li> <li>64—Overdrive shaft bearing oil seal</li> <li>65—Overdrive main shaft rear bearing</li> <li>66—Overdrive main shaft rear bearing snap ring</li> <li>67—Overdrive clutch shaft pilot bushing</li> <li>68—Speedometer drive gear spacer</li> <li>69—Speedometer drive pinion</li> <li>70—Overdrive main shaft front bearing</li> </ul> | <ul style="list-style-type: none"> <li>71—Overdrive rear bearing retainer</li> <li>72—Transmission shaft second speed gear thrust washer pin spring</li> <li>73—Transmission countershaft</li> <li>74—Transmission clutch gear sleeve</li> <li>75—Transmission countershaft gear thrust washer</li> <li>76—Transmission case</li> <li>77—Transmission shaft second speed gear thrust washer—rear</li> <li>78—Transmission shaft second speed gear thrust washer pin</li> <li>79—Transmission case drain plug</li> <li>80—Transmission shaft second speed gear</li> <li>81—Transmission countershaft gear</li> <li>82—Transmission shaft</li> <li>83—Gearshift rail and fork—first and reverse</li> <li>84—Transmission countershaft bearing spacer</li> <li>85—Transmission countershaft bearing</li> <li>86—Transmission sliding gear—first and reverse</li> <li>87—Transmission countershaft gear thrust washer plate</li> <li>88—Transmission countershaft gear thrust washer</li> <li>89—Transmission shaft bearing adapter snap ring</li> <li>90—Transmission shaft bearing adapter pin</li> <li>91—Transmission shaft bearing snap ring</li> <li>92—Transmission shaft bearing washer</li> <li>93—Overdrive clutch shaft</li> <li>94—Overdrive housing</li> <li>95—Overdrive housing adjusting hole plug</li> <li>96—Overdrive clutch shaft shifting collar snap ring</li> <li>97—Overdrive clutch shaft shifting collar</li> <li>98—Overdrive sun gear plate snap ring</li> <li>99—Overdrive planet pinion cage washer</li> <li>100—Overdrive sun gear</li> </ul> |
|--|--|--|